



Rip Raft Connector Instructions

Part Number Color

1024607 Tan
 1006701 Gray
 1006703 Yellow
 1006704 Orange

1004508 Hardware Box




Step 1: Insert 5" connecting rods through raft connector and secure in place with oval screw #12 x 1.

Step 2: Insert 5/16 x 6 full thread bolt through 5/16 lock washers, rectangular washer plates and insert into top raft connector. Thread bolt about 1/2" into connecting rods of bottom connector.

Step 3: Set filler strip into connection groove on each rip raft, bend tabs on foam filler strip to fit into bottom of connection groove on rip raft.

Step 4: Set assembled connector on edge of rip raft. Make sure foam filler strip stays in position. Float second rip raft into position by holding connector apart and insert second raft in-between connector and make sure foam filler strip on second raft also stays in position and tighten bolts.

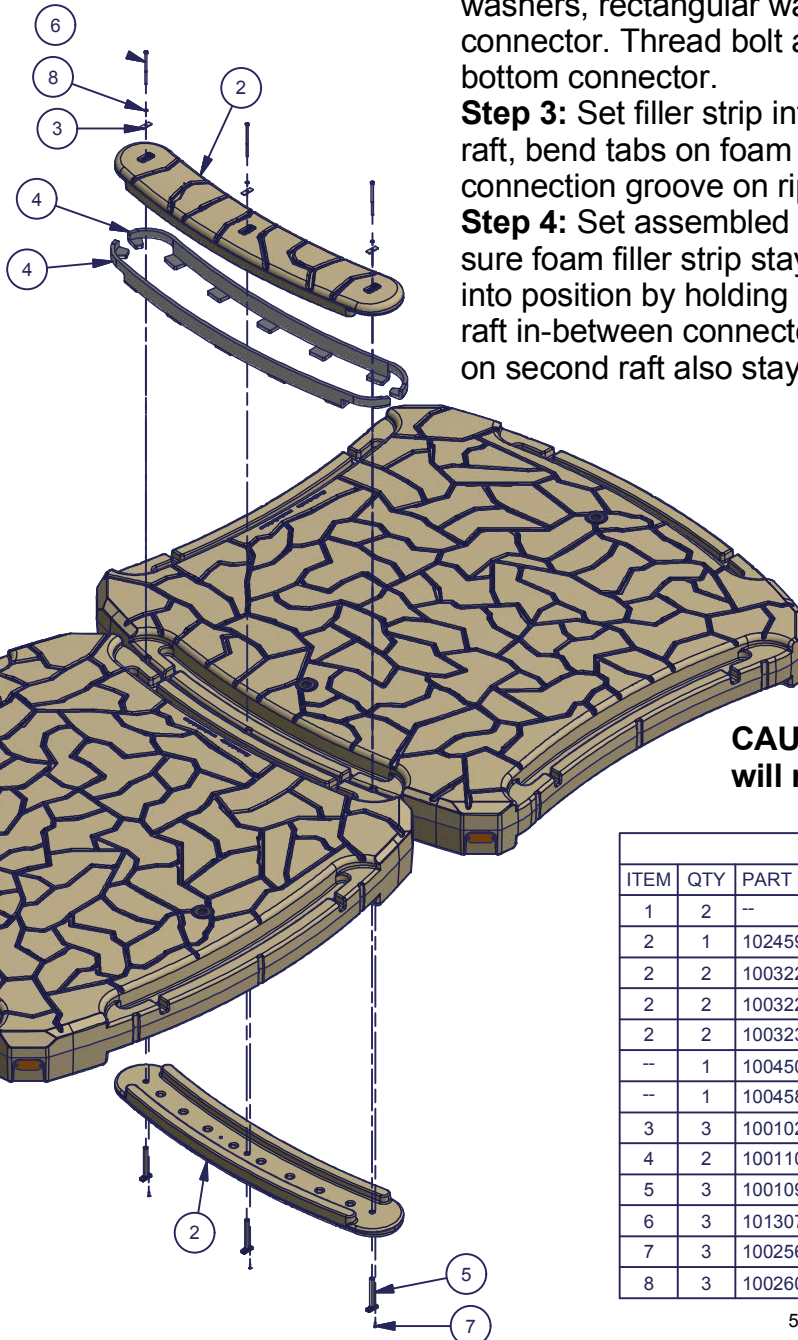

CAUTION: Failure to use filler strips will result in a pinching hazard.

| Parts List | | | |
|------------|-----|-------------|---|
| ITEM | QTY | PART NUMBER | DESCRIPTION |
| 1 | 2 | -- | Swim Raft Poly Rip (sold separately) |
| 2 | 1 | 1024596 | Poly Rip Swim Raft Connector Tan |
| 2 | 2 | 1003226 | Poly Rip Swim Raft Connector Gray |
| 2 | 2 | 1003227 | Poly Rip Swim Raft Connector Yellow |
| 2 | 2 | 1003232 | Poly Rip Swim Raft Connector Orange |
| -- | 1 | 1004508 | Hardware Box Rip Raft Connector |
| -- | 1 | 1004583 | Bolt Bag Poly Rip Raft Connector |
| 3 | 3 | 1001026 | Washer Rectangular SS 1/8 x 2 x 3/4 |
| 4 | 2 | 1001103 | Foam Filler Strip 1/2" |
| 5 | 3 | 1001098 | Composite Connector Rod 5" |
| 6 | 3 | 1013071 | Bolt Hex 5/16-18 x 6.0 Full Thread 304 SS |
| 7 | 3 | 1002566 | Screw Oval #12 x 1.0 SS |
| 8 | 3 | 1002606 | Washer Lock 5/16 SS |